

Function number	Test Station	Percent	Faults	Percent
PERFORM OPERATION	13	92.9	54	100.0
BASIC FUNCTIONS:	7	50.0	12	22.2
010000 FURNISH POWER	1	7.1	3	5.6
011000 SUPPLY FUEL	1	7.1	3	5.6
020000 PROPEL VEHICLE	1	7.1	1	1.9
022000 TRANSFER TORQUE	1	7.1	1	1.9
030000 CONTROL MOVEMENT	5	35.7	6	11.1
031000 POSITION OPERATR	1	7.1	1	1.9
033000 CONTRL DIRECTION	4	28.6	4	7.4
040000 POWER MACHINERY	2	14.3	2	8.7
SUPPORTING FUNCTIONS:	13	92.9	42	77.8
050000 ASSR CONVENIENCE	3	21.4	3	5.6
053000 AID SERVICE	3	21.4	3	5.6
053100 FACILITATE ACCESS	1	7.1	1	1.9
053200 SIMPLIFY SERVICE	2	14.3	2	3.7
060000 ASSR DEPNDABILTY	10	71.4	19	35.2
061000 PREVENT DAMAGE	6	42.9	7	13.0
061300 RESIST BREAKAGE	5	35.7	5	9.3
061600 WARN OPERATOR	1	7.1	1	1.9
062000 MAINTAIN TASK	7	50.0	8	14.8
062300 REDUCE WEAR	3	21.4	3	5.6
064000 PROTECT CROP	1	7.1	1	1.9
064100 ADJUST TRACKS	1	7.1	1	1.9
067000 PROTCT ENVRNMENT	3	21.4	3	5.6
067100 REDUCE EMISSION	1	7.1	1	1.9

<u>Function number</u>	<u>Test Station</u>	<u>Percent</u>	<u>Faults</u>	<u>Percent</u>
067200 ELIMINATE LEAKS	2	14.3	2	3.7
070000 SATISFY USER	7	50.0	20	37.0
071000 INCREASE COMFORT	5	35.7	8	14.8
071500 ABSORB SHOCK	4	28.6	5	9.3
072000 FACILITAT OPRAINS	2	14.3	3	5.6
072100 INCREAS VISIBLTY	2	14.3	2	3.7
074000 CONSERVE FUEL	6	42.9	9	16.7